


X-DANTE / KT DN32-DANTE firmware update

Version 4.0 - (31 July 2018)


Audinate firmware update for Brooklyn II modules

Requirements:

1. Download the most recent **Firmware Update Manager** from audinate.com.
<https://www.audinate.com/products/firmware-update-manager>
2. Read the **Update Manager User Guide**.
<https://www.audinate.com/content/dante-firmware-update-manager-user-guide>
3. Download the **firmware files** for your specific Dante option card
 - > Behringer X-DANTE
 - > Klark Teknik DN32-DANTE
 - > Klark Teknik KT-DANTE64
 - > Klark Teknik DM80-DANTE
4. Start Firmware Update Manager app and browse for the firmware files on your PC/Mac.
5. After scanning the network, all attached compatible Dante devices will be listed and you can choose which one(s) to update by setting the tickmark.

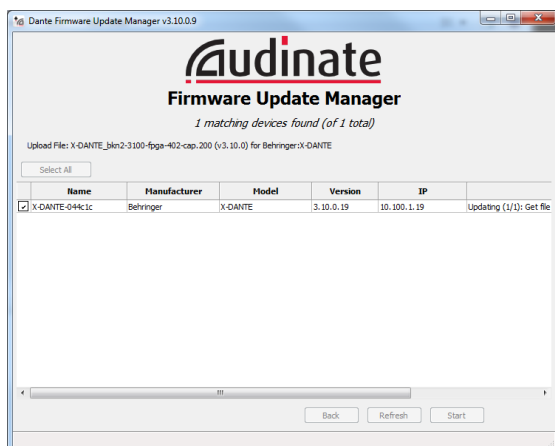

6. Keep all selected Dante devices powered up until the completion message pops up.

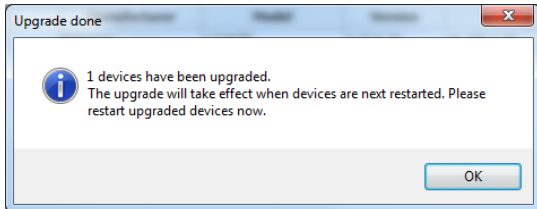

7. The new firmware will be active after re-booting your respective Dante devices.
8. Connection to Ravenna / AES67 devices will require installing the [RAV2SAP](#) Connection Manager.